



# HTC Windows Phone 8S Logic Board Replacement

HTC Windows Phone 8S Logic Board Replacement

Written By: ZFix



## INTRODUCTION

How to disassemble the phone and remove the logic / main board.

[video: <https://www.youtube.com/watch?v=emuga3EO4hg>]



### TOOLS:


- [Phillips #0 Screwdriver](#) (1)
  - [iFixit Opening Tools](#) (1)
  - [Spudger](#) (1)
  - [T5 Torx Screwdriver](#) (1)
  - [Tweezers](#) (1)
-

## Step 1 — Loudspeaker




- Switch off the phone.
- Remove the SIM / memory card cover.
- Remove any SIM and memory cards.
- Use screwdriver torx T5 and unscrew the two screws at the bottom of the battery / back cover.

## Step 2

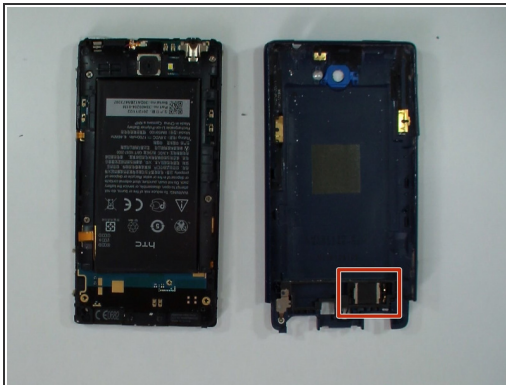




- Use a plastic tool and slowly separate the back cover.
- The loudspeaker is inside on the back cover.

## Step 3 — Battery

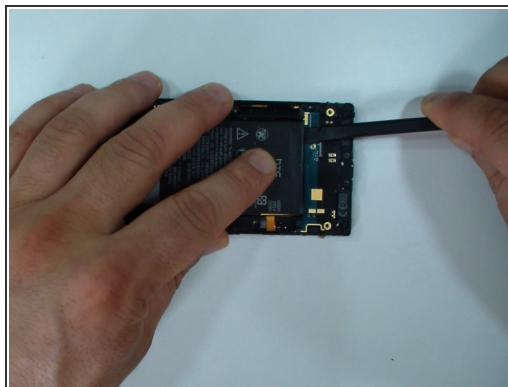

- Use a Phillips #0 screwdriver and remove the 4x silver screws.
- With a plastic tool carefully separate the battery from the logic board.




## Step 4

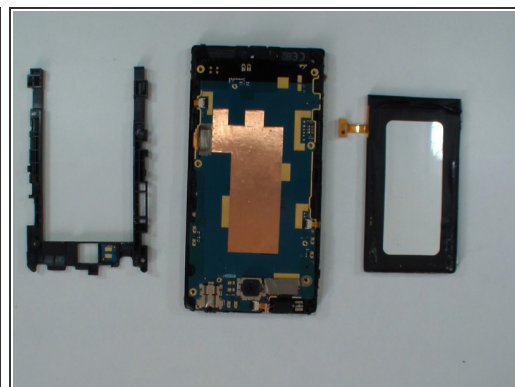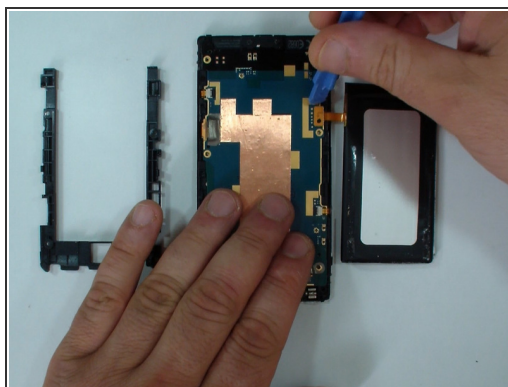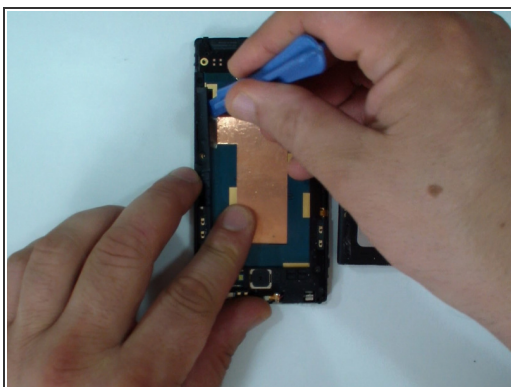

- The battery connector is under the middle frame. Remove it and disconnect the battery.
- Model: BM59100 / 3,8VDC / 1700mAh




## Step 5 — Flex Cables

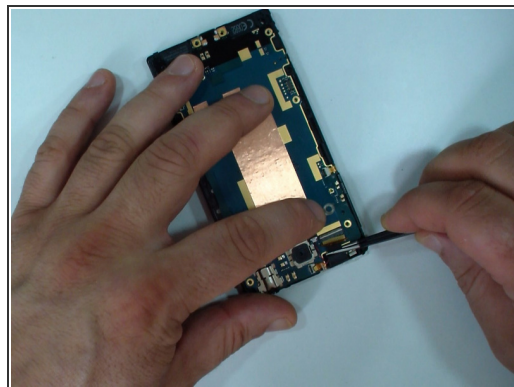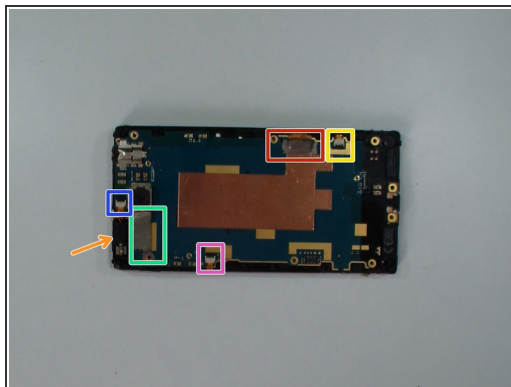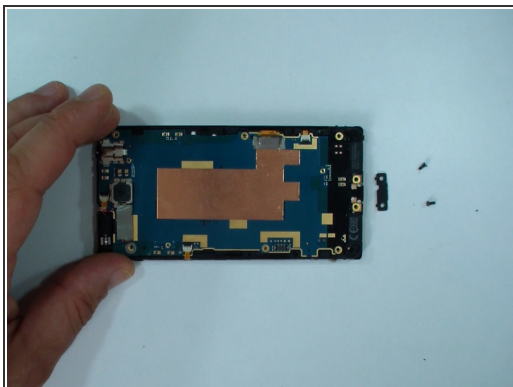


- Remove the USB dock connector metal plate.
- Open flex cable connectors:
  - LCD display flex cable
  - Menu buttons flex cable
  - Volume buttons flex cable
  - Touch screen flex cable
  - Power button flex cable
- Pick up the vibrating motor and take out all flex cables except the LCD display flex cable.

## Step 6 — Logic Board Removal

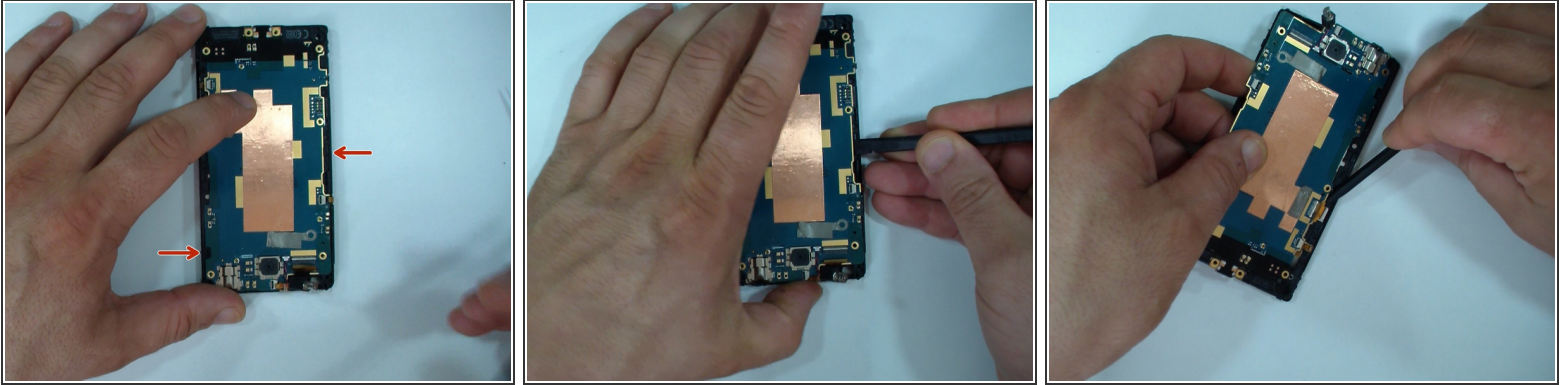

- The logic board is secured to the display frame by two locking clips.
- Use a plastic tool to release it.
- Now remove the LCD display flex cable from its connector.

## Step 7 — Logic Board / Main Board

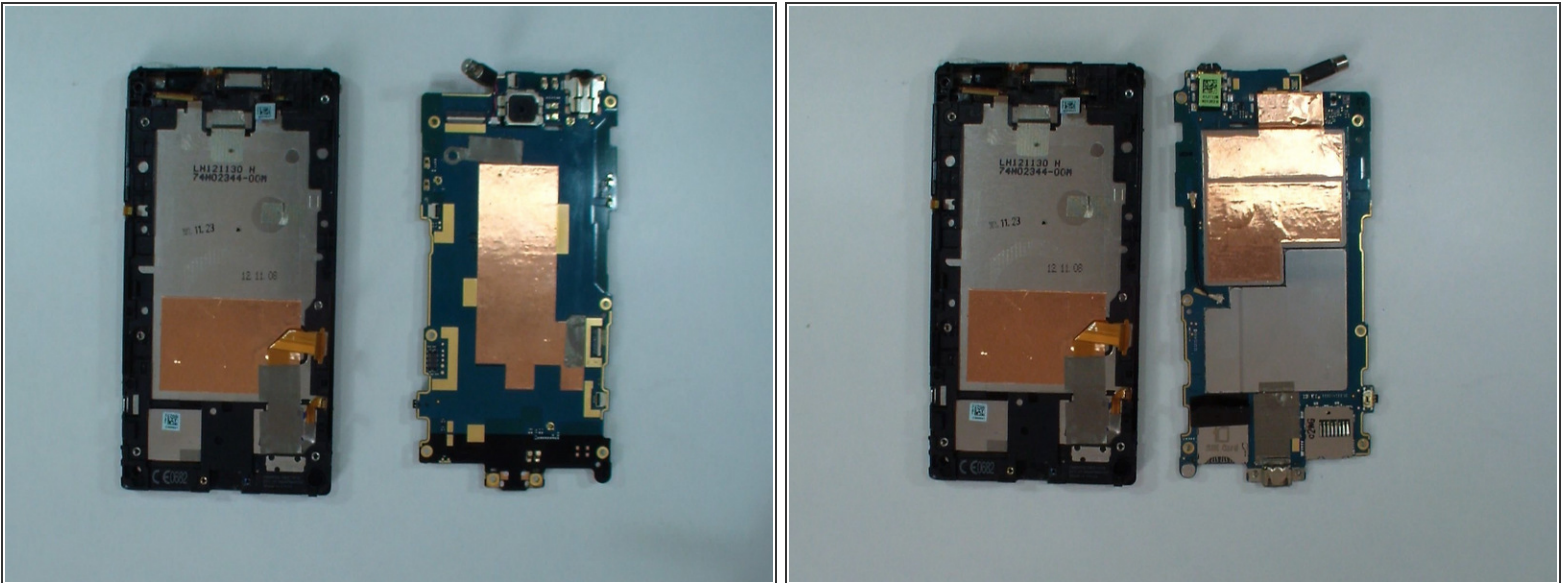

- HTC Windows Phone 8S Logic Board.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-23 06:45:03 AM.